


Instructions for Using Alumaseal™ Ferrules

Cat.# 21472, 21473, 21474

1. Place column nut onto capillary tubing.
2. Place back of Alumaseal™ ferrule onto capillary tubing as shown in figure.
3. Place front of Alumaseal™ ferrule onto capillary tubing.
4. Tighten nut until capillary tubing cannot be moved.

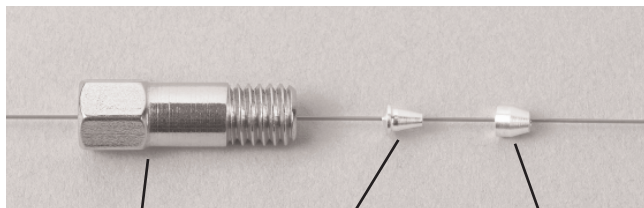

Column Nut

Back of ferrule

Front of ferrule